

# INSTALLATION INSTRUCTIONS

Item#N6476-293 (New. 05/04/2017)

## READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

### ASSEMBLING THE FIXTURE (Fig. 1)

1. Shut off power at the fuse box or circuit breaker. If necessary, remove old fixture including mounting hardware.
2. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
3. Install the glass panel (J) (K) (L) (M) (N) (O) (P) into fixture body (I) and secure with tabs provided.
4. Secure metal tube (E) onto nipple (F).
5. Secure loop assembly (A) onto the top of metal tube (E) and tighten the wire.
6. Connect the drop rod (D) to joints (B) on the loop assembly (A) and joints (B) on the fixture body (I) using screws (C). Do the same with the other drop rods.

### HANGING THE FIXTURE (Fig. 2)

7. Secure the nipple into the ceiling loop until snug.
8. Secure the other end of the nipple with the ceiling loop to the crossbar until snug.
9. Place the lock washer over the end of the nipple protruding through the crossbar and thread the hex nut onto nipple until tight.
10. Take the crossbar assembly and mount to ceiling junction box with mounting screws (Size: #8-32N\*L0.5"). The side of the crossbar marked "GND" must face out.
11. Attach the quick link to the fixture loop. Quick link must be completely closed when installed. By measuring determine correct number of links needed for proper hanging height. Use a pair of chain pliers to open one end link of the chain and discard un-wanted chain. Slip the lock collar and canopy over the chain. Open quick link, add to the other end link of the chain and lift the fixture to attach to the ceiling loop, close the quick link.
12. Lace the fixture's wires through the chain links and pull until tight. Feed the fixture's wires through the lock collar, canopy, ceiling loop and the nipple and pull until tight.

### CONNECTING THE WIRE (Fig. 3)

13. At this point, connect the electrical wire as shown in figure 3, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the Green Screw provided.
14. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the lock collar and thread onto the ceiling loop protruding through canopy.

### FINISHING THE INSTALLATION (Fig.1)

15. Place the candle cover (H) over the socket (G)
16. Install the light bulb(s) (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!). (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**


Your installation is now complete. Return power to the junction box and test the fixture.

**Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.**

Fig. 1 Set# A012


- Crossbar
- Ground Screw
- Mounting Screw\*2

Candle Cover#CCV24132P-293

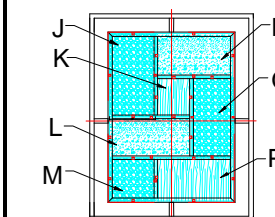


Code	Finish	Size(mm)	Qty
J	Clear Hammered	231*127	4
K	Clear Wood Pattern	108*96	4
L	Clear Seeded	227*109	4
M	Clear Hammered	127*119	4
N	Clear Seeded	214*119	4
O	Clear Hammered	221*114	4
P	Clear Wood Pattern	214*119	4

Fig. 2

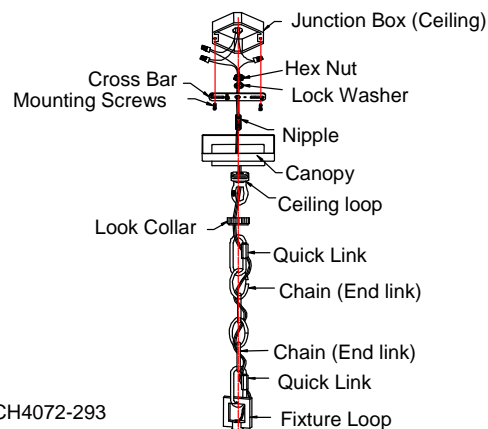

Chain#HCH4072-293

Fig. 3

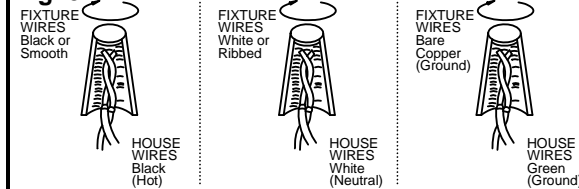

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



LA-2720E